



### PARTS LIST FOR BC-006

DRWG. NO.	DESCRIPTION	PART NO.
SA-1	PISTON HOUSING*	SA-1-006
3	PISTON SHAFT	3-003-BC
5	PISTON LOCK PLATE	5-006
6	SAFETY LEVER ASSEMBLY	DA-1
7	SPOOL	7-006
8	SPOOL O-RING (2 required)	8-01-K10***
9	SPOOL SPRING	9-01
11	SNAP RING	11-01
14	END CAP	BC-14-006
15A	O-RING PISTON SEAL	15A-006***
16	O-RING (2 required)	16-003-K10***
17	O-RING	17-006-K10***
18	O-RING	18-01***
22	VALVE SPACER	22-006
24	VALVE SPACER	24-006
25	CAM	BC-6
29	VALVE WASHER	24-01
33	SCREW (2 required)	28-01-K10
35	O-RING	35-003-K10***
36	PISTON SEAL HOLDER	36-006
37	MOUNT SCREW (3 required)	37-003-K10
41	SPRING MOUNT SCREWS (4 req)	BC-29-K4
42	EXTERNAL JAW SPRINGS (2 req)	BC-21-K2
43	SIDE PLATE MOUNT SCREW	4-24A
44	ROLL PIN (2 required)	3-20-K2
45	ROLLER (2 required)	3-19-453-K2
46 & 47	JAW SET ONLY, BALL CRIMP	RBC-3
48	PIVOT PIN W/CLIPS(2 required)	BC-23A-1
49	INTERNAL JAW SPRING	BC-21B
50	SPRING BLOCK (2 required)	BC-22-K2
51	SIDE PLATES (2 required)	BC-30-K2
52	JAW HOUSING	BC-2
53	SNAP RINGS****	BC-7A

\* Sold with trigger assembly and air valve

\*\*\* Only sold as part of O-ring repair kit - #006-KIT

\*\*\*\* Included with BC-23A-1

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5
104-	HANGER BRACKET	104