



PARTS LIST FOR BP-1

DRWG. NO.	DESCRIPTION	PART NO.
1	PISTON HOUSING ASSEMBLY*	1PP-BP

PARTS LIST

DRWG. NO.	DESCRIPTION	PART NO.
2	END CAP	6- BP
7	SPOOL	7A-MSP
6	LEVER ASSEMBLY	6TL-MSP
8	SPOOL O'RING (2 required)	16-01-K10
9	SPOOL O'RING (2 required)	9-BP-K10
10	VALVE BODY	10A-MSP
15	PISTON CUP	15-MSP
16	RETURN SPRING	16-BP
18	O-RING	18-MSP-K10
23	LOCK SCREW	23-BP-K10
26	LOCK SCREW	20-MSP-K10
30	QUILL	3Q-BP
33	LEVER SCREW (2 required)	28-01-K10

PARTS FOR QUILL ASSEMBLY TO BE USED WITH BP-1

5	CAP SCREW	32-01
H	NOSE CONE	H-BP

* Includes trigger assembly

*** Only sold as part of O-ring repair kit – BP-MSP-KIT -\$4.56

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5
104-	HANGER BRACKET	104

****POWER PACK SHIPPED WITH ONE HOSE