



PARTS LIST FOR SP-008 and SP-008F

DRWG NO.	DESCRIPTION	PART NO.
SA-1	PISTON HOUSING*	SA-1-008
1-F	PISTON HOUSING REMOTE	1-F-008

PARTS LIST

DRWG. NO.	DESCRIPTION	PART NO.
3A	FRONT PISTON SHAFT	3A-005
3B	REAR PISTONG SHAFT	3B-005
5	CYLINDER DIVIDER	5-008
6	SAFETY LEVER ASSEMBLY	DA-1**
7	SPOOL	7-008**
8	SPOOL O'RING (2 required)	8-01-K10***
9	SPOOL SPRING	9A-01**
11	SNAP RING	11-01**
14	END CAP	14-008
15A	FRONT PISTON SEAL	15A-008***
15B	REAR PISTON SEAL	15B-008***
16	PISTON SHAFT O'RING	16-003-K10***
17	O-RING	17-008***
18	O-RING	18-005-K10***
19	DIVIDER SEAL	17-008***
22	VALVE SPACER	22-002**
22	VALVE SPACER (Two required in 008)	22-02**
24	VALVE WASHER	24-006**
25-H	HEX CAM	25-H
30	PISTON SNAP RING	30-008
33	LEVER SCREW (2 required)	28-01-K10**
34	PISTON SHAFT O'RING	34-005***
35	PISTON SHAFT O'RING	35-005***
36A	FRONT PISTON PLATE	36A-008
36B	REAR PISTON PLATE	36B-008

* Sold with trigger assembly and air valve

** Items not used in SP-008F

*** Only sold as part of O-ring repair kit - #008KIT

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5****
104-	HANGER BRACKET	104

****Hose sent with power pack, two hoses sent with SP-008F