



PARTS LIST FOR BC-004

DRWG. NO.	DESCRIPTION	PART NO.
SA-1	PISTON HOUSING*	SA-1-004
3	PISTON SHAFT	3-003-BC
5	PISTON LOCK PLATE	5-004
6	SAFETY LEVER ASSEMBLY	DA-1
7	SPOOL	7-004
8	SPOOL O'RING (2 req)	8-01-K10***
9	SPOOL SPRING	9-01
11	SNAP RING	11-01
14	END CAP	BC-14-004
15A	O-RING PISTON SEAL	15A-004***
16	O-RING (2 req)	16-003-K10***
17	O-RING	17-004-K10***
18	O-RING	18-01
22	VALVE SPACER	22-004
24	VALVE WASHER	24-01
25	CAM	BC-6
29	VALVE WASHER	24-01
33	SCREW (2 req)	28-01-K10
35	O-RING	35-003-K10***
36	PISTON SEAL HOLDER	36-004
37	MOUNT SCREW (3 required)	37-003-K10
41	SPRING MOUNT SCREWS (4 req)	BC-29-K4
42	EXTERNAL JAW SPRINGS (2 req)	BC-21-K2
43	SIDE PLATE MOUNT SCREW (2 req)	4-24A
44	ROLL PIN (2 req)	3-20-K2
45	ROLLER (2 req)	3-19-453-K2
46 & 47	JAW SET ONLY	RBC-3
48	PIVOT PIN W/CLIPS (2 req.)	BC-23A-1
49	INTERNAL JAW SPRING	BC-21B
50	SPRING BLOCK (2 req)	BC-22-K2
51	SIDE PLATES (2 req)	BC-30-K2
52	JAW HOUSING	BC-2
53	SNAP RING (4 req.)****	BC-7A

* Sold with trigger assembly and air valve

*** Only sold as part of O-ring repair kit - #004-KIT

****Sold with BC-23A-1

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5
104-	HANGER BRACKET	104