



### PARTS LIST FOR CLP-2000A

DRWG. NO.	DESCRIPTION	PART NO.
1F	PISTON HOUSING	1-F-002
3	PISTON SHAFT (INCLUDES 20-CLP-2000)	3-2000-CLP
4	SPRING PLUNGER	4-CLP-2000
5	LOCK NUT	36-CLP
6A	COVER PLATE	6A-CLP-2000
7	CUTTER BLADE	7-CLP-2000
8	TENSION SPRING	3-CLP-K10
9A	BASE	9A-CLP-2000
10A	MOUNTING PLATE	10A-CLP-2000
11A	TENSION PIN (2 REQUIRED)	11A-CLP
12	COVER SCREWS (2 REQUIRED)	12-CLP-2000
13	DIE SCREWS	13-CLP-2000
14	END CAP	5-CLP-2000
15	PISTON SEAL	15A-02***
16	O' RING (2 REQUIRED)	16-01-K10***
17	O'RING	17-02-K10***
18	O'RING	18-01***
19A	MOUNTING BASE SCREW	19A-CLP-2000
20	PISTON SHAFT EXTENSION	20-CLP-2000
21	TRAY	21A-CLP-2000
22A	FRONT COVER	22A-CLP-2000
24A	SHORT SPRING PLUNGER	24A-CLP-2000
29	PISTON WASHER	25-01

\*\*\* PART OF REPAIR KIT 2000-KIT

#### NOT SHOWN

	FOOT SWITCH	105
	AIR HOSE, 5' 1/4" x 1/8" NPT FITTINGS	102-5